

FIG. 1

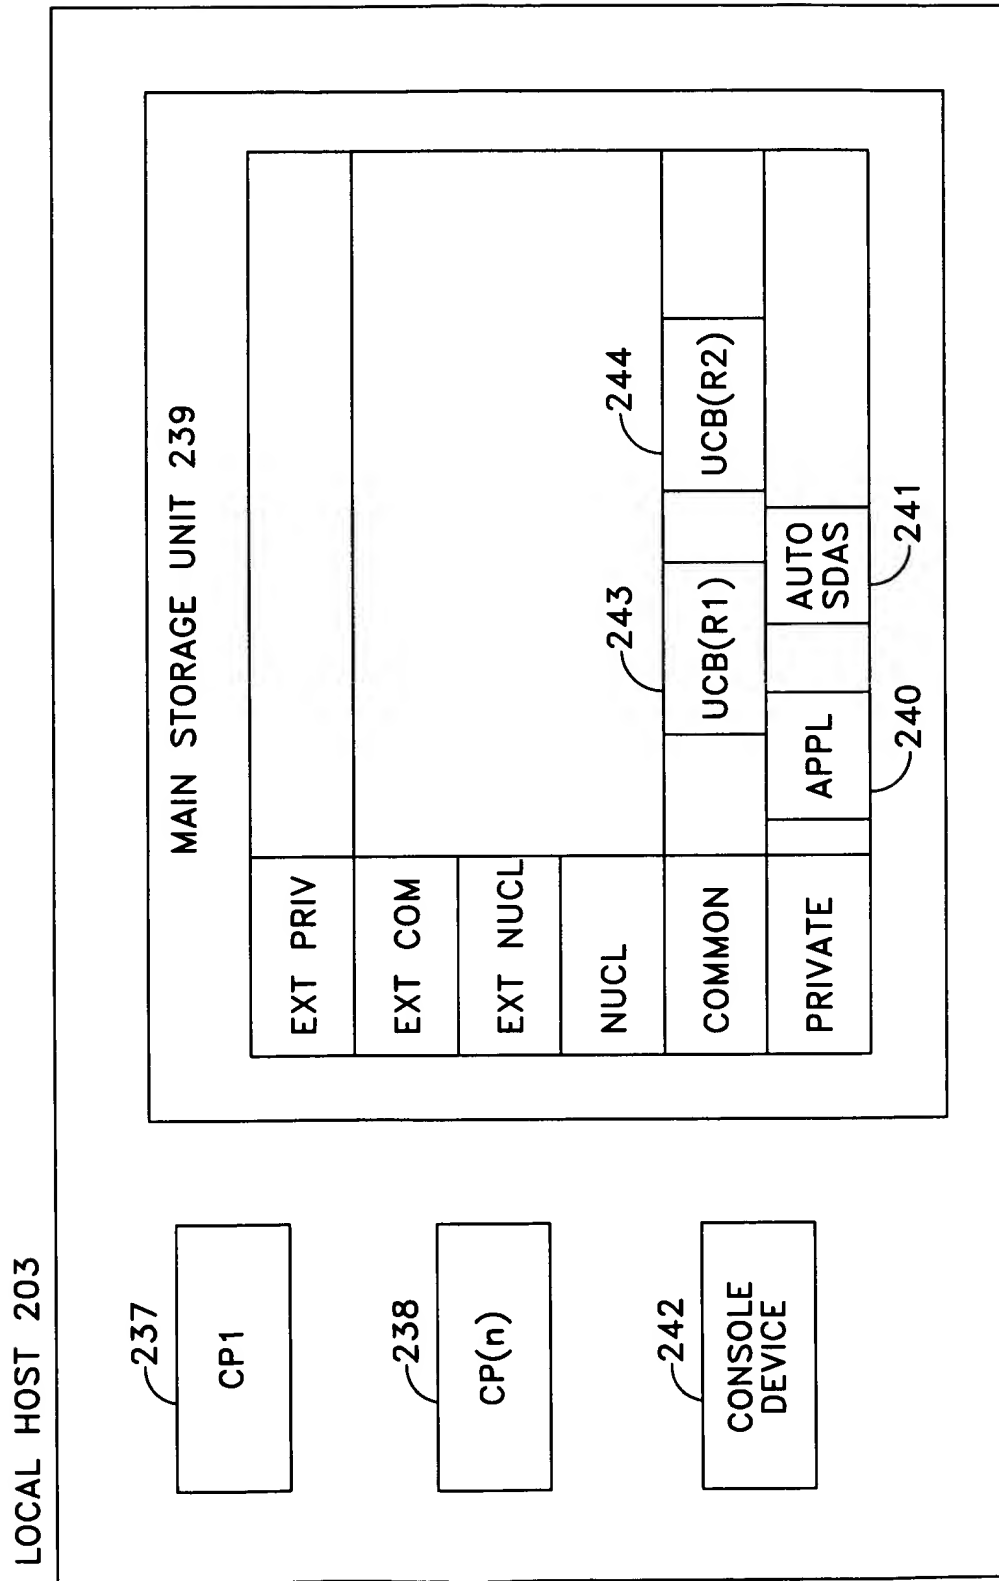


FIG. 2

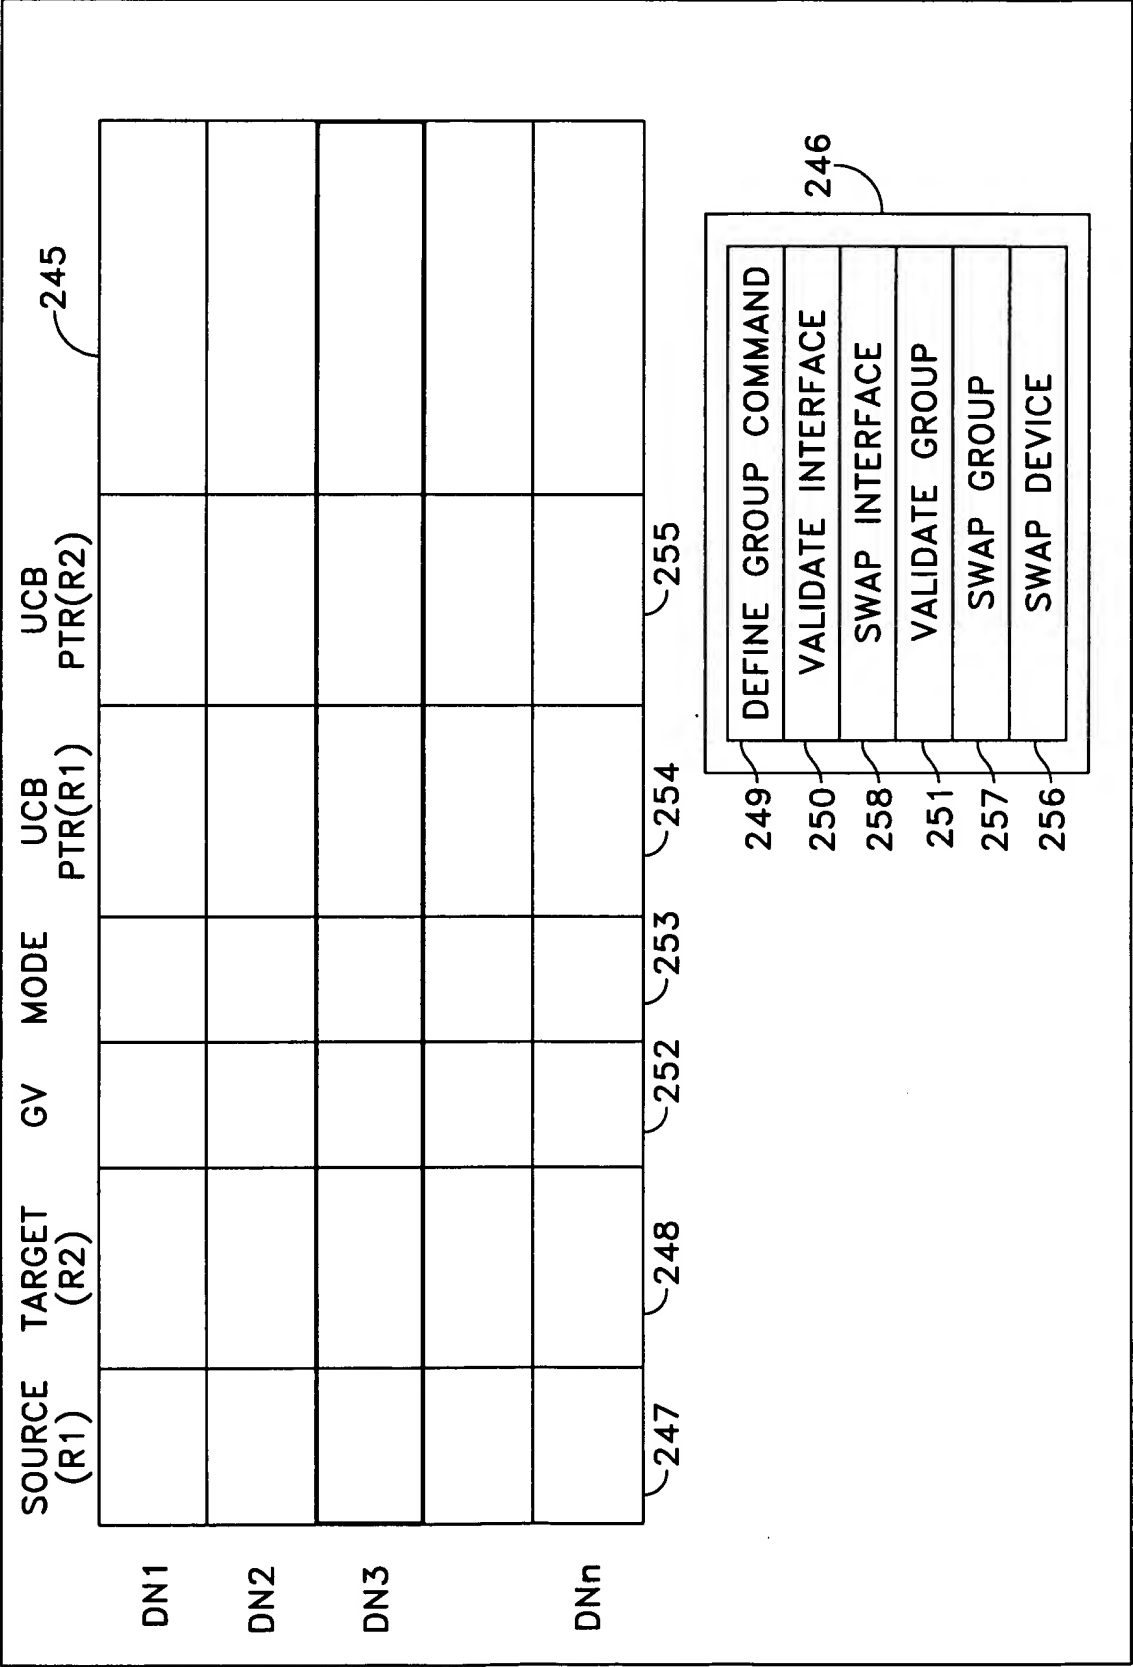


FIG. 3

RECEIVE A DEFINE GROUP COMMAND

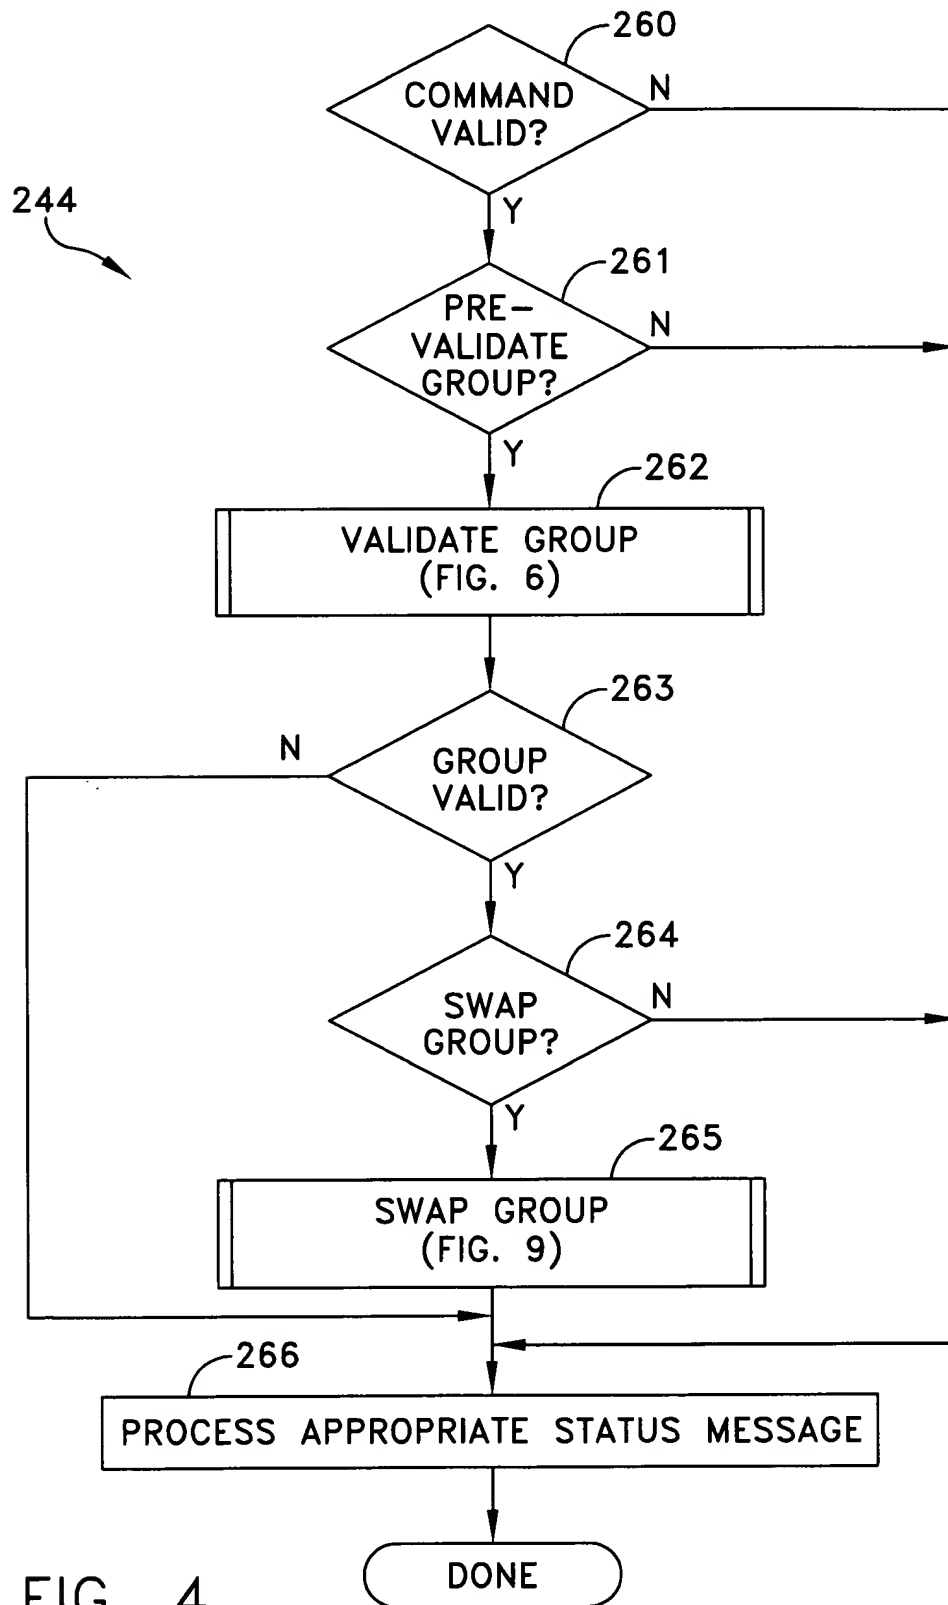


FIG. 4

VALIDATE INTERFACE

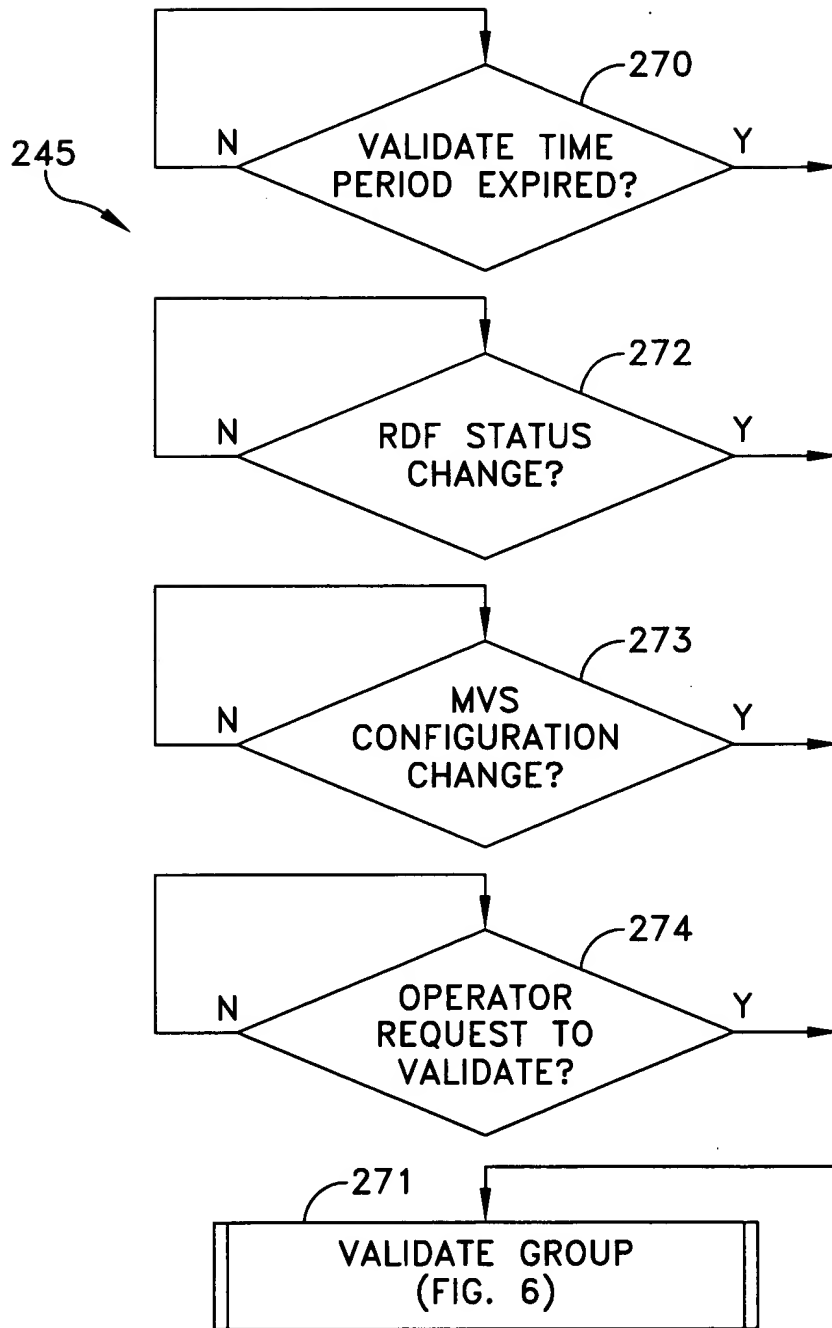


FIG. 5

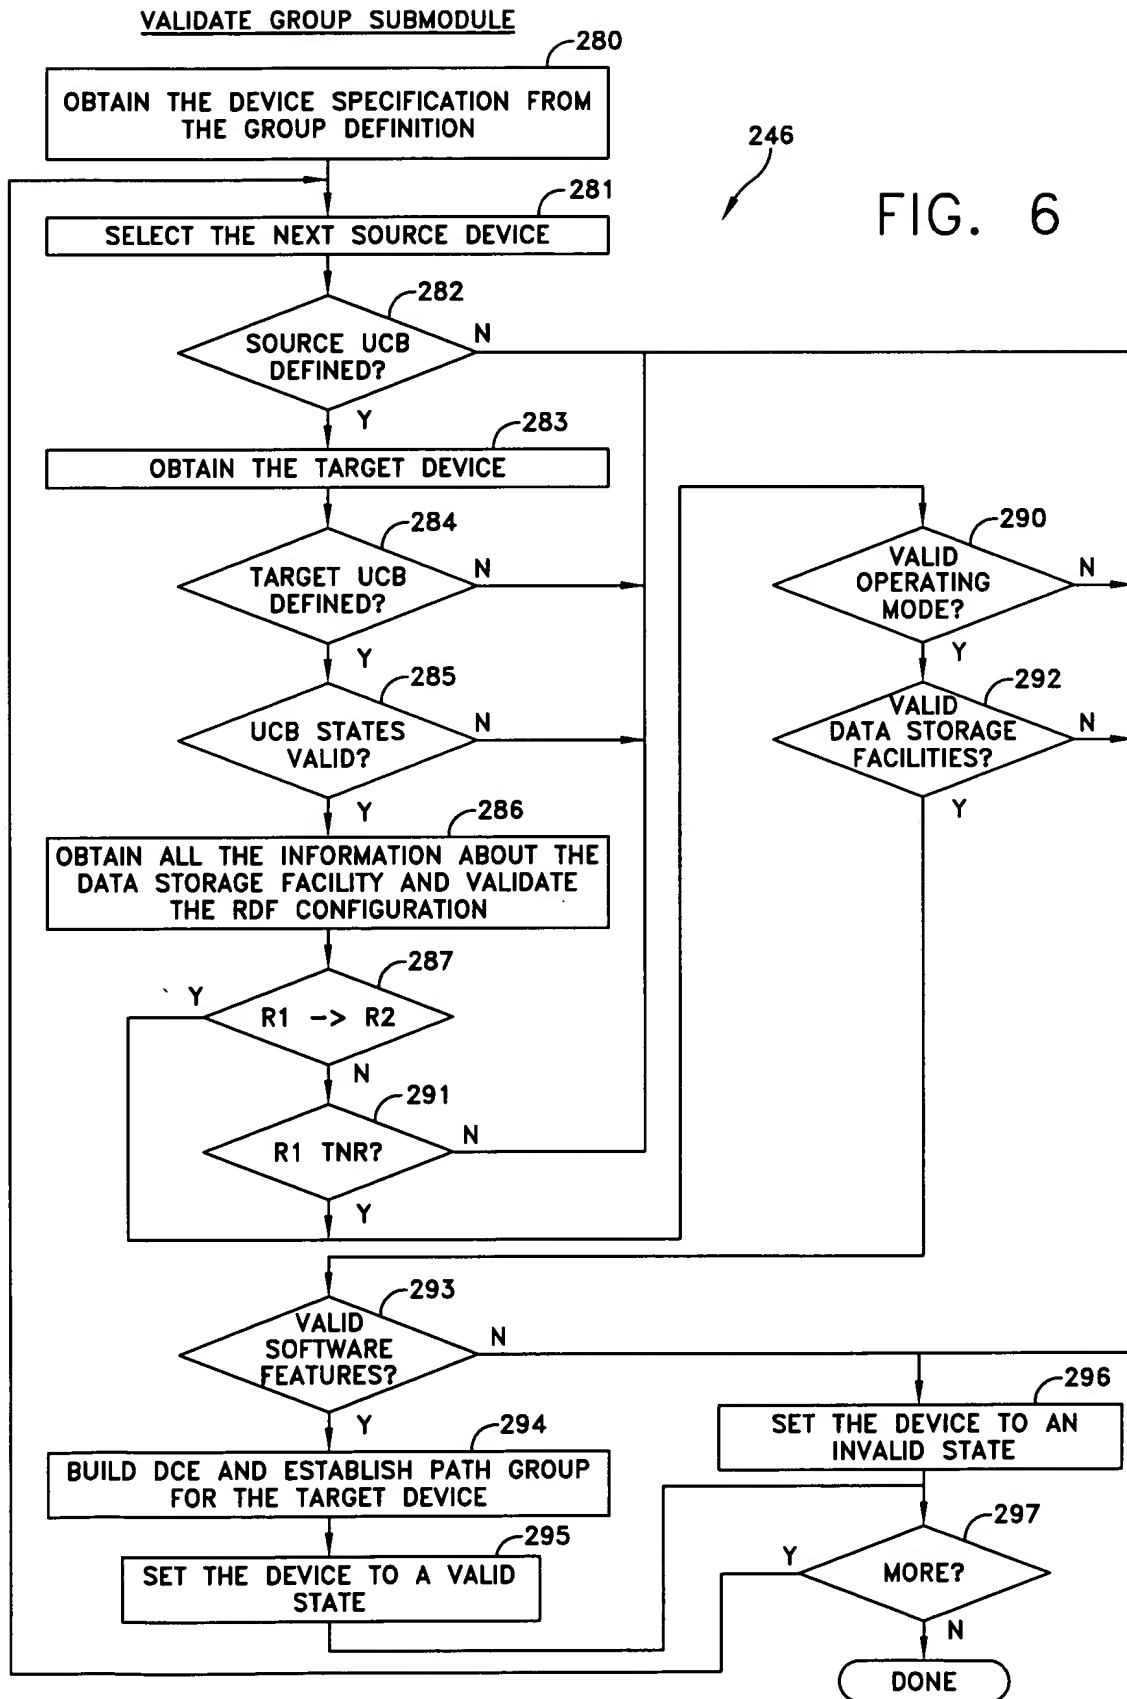


FIG. 6

SWAP INTERFACE

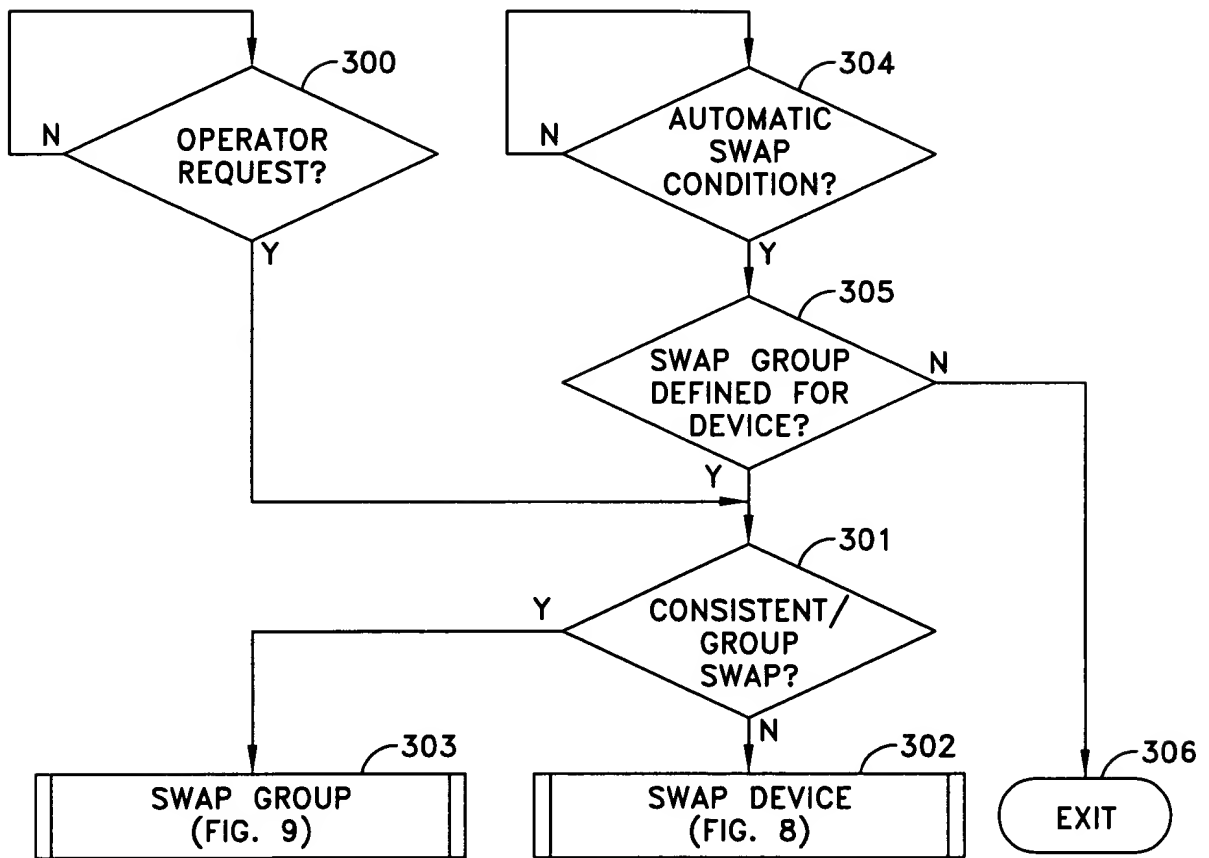


FIG. 7

SWAP DEVICE

-310

RAISE THE IOS LEVEL FOR THE LOGICAL DEVICE IN THE SOURCE DATA STORAGE FACILITY

256

OK?

40

2

-311

RECONFIGURE THE RDF CONFIGURATION

OK?

41

N

-312

SWAP THE UCB/DCE DATA ASSOCIATED
WITH EACH OF THE LOCAL AND REMOTE
LOGICAL DEVICES

OK?

42

2

**CONSISTE
SWAP?**

Y

-314

LOWER THE IOS LEVEL FOR THE LOGICAL
DEVICE IN THE SOURCE DATA STORAGE
FACILITY

-315

RESET THE SOURCE VOLUME STATUS

-316

SIGNAL COMPLETION OF THE SWAP

**SWAP
COMPLETE**

43

BACKOUT THE SWAP FOR THE DEVICE WITH A REVERSE SWAP OPERATION

44

**SIGNAL AN ERROR IN THE
SWAP OPERATION**

FIG. 8

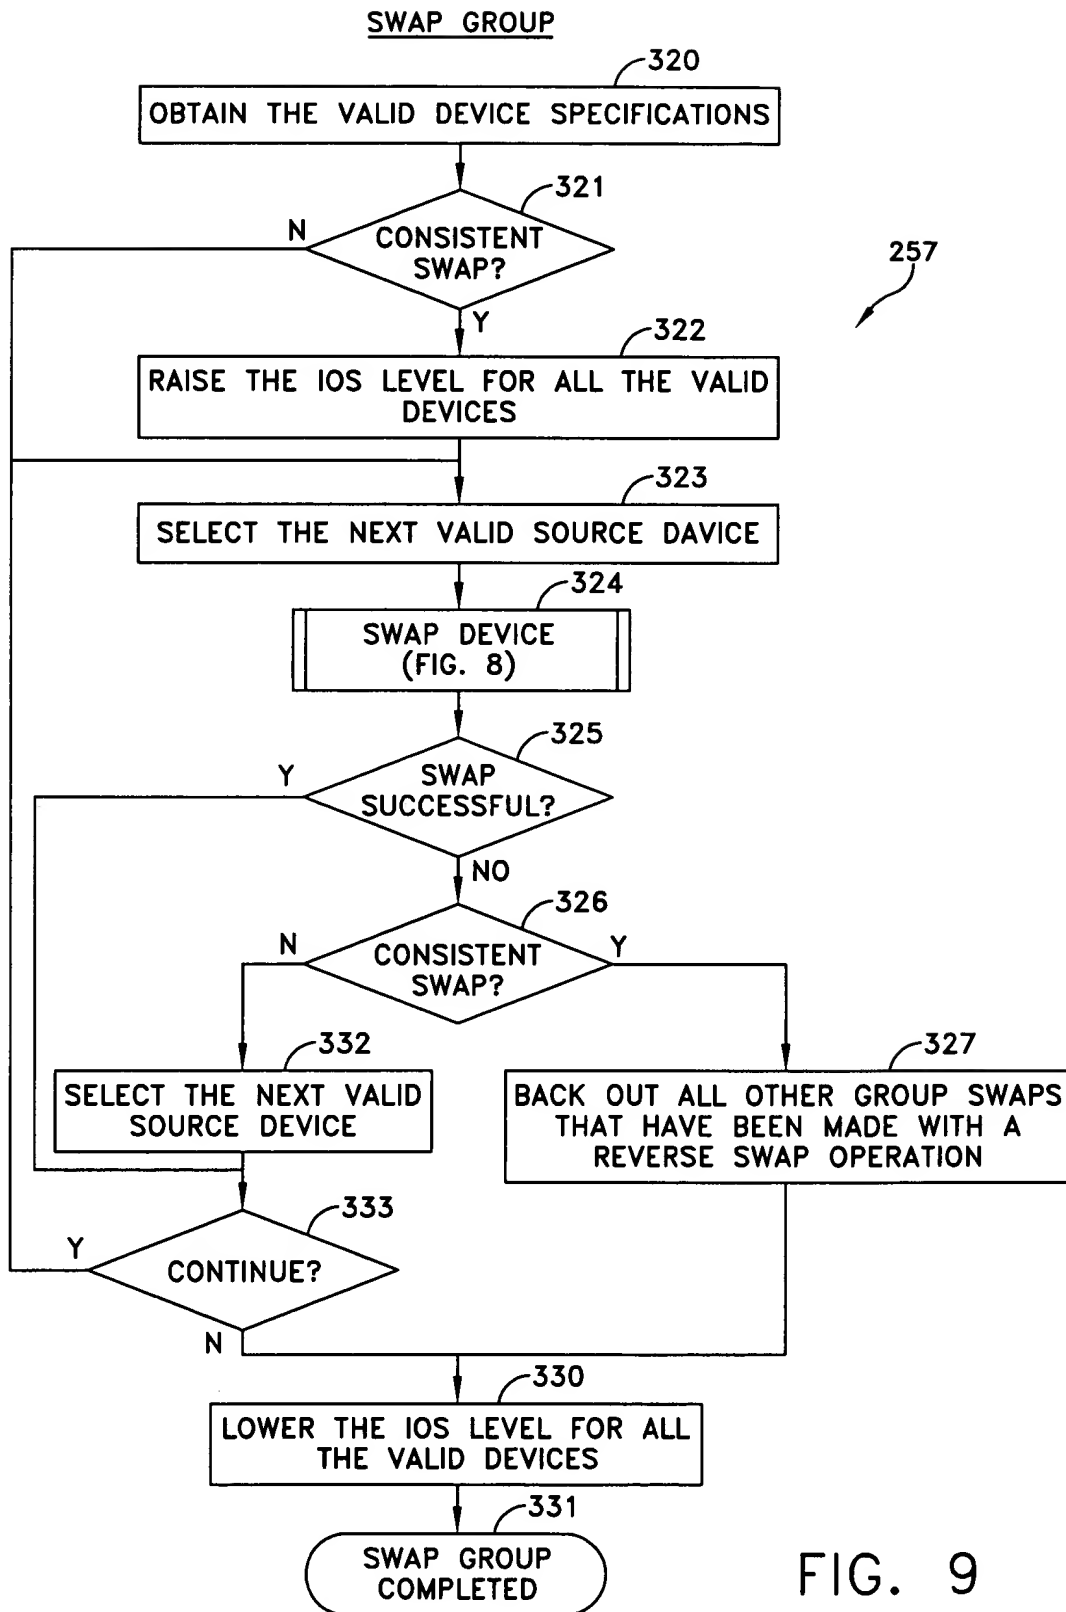


FIG. 9